




**DISTRIBUTORI
OLEODINAMICI**

WE6

**SOLENOID OPERATED
DIRECTIONAL CONTROL VALVES**

WE6 SERIES DIRECTIONAL CONTROL VALVES
ARE SOLENOID OPERATED DIRECTIONAL
SPOOL VALVES.


THESE VALVES ARE USED TO THE START, STOP
AND DIRECTION OF FLOW.

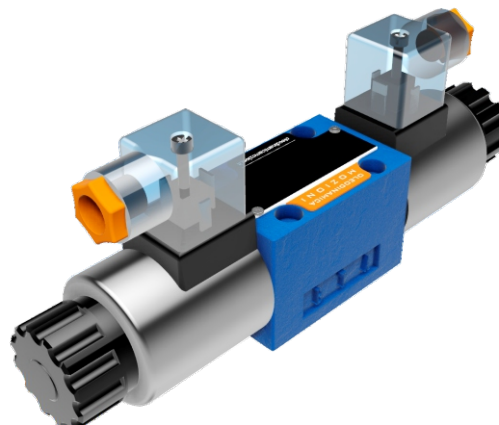

TECHNICAL DATA

SIZE		6
MAX. FLOW RATE (L/MIN)		80
OPERATING PRESSURE (MPA)	A, B, P PORTS	31.5
	T PORT	16
WEIGHT (KG) WITHOUT/WITH HANDLE	1 SOLENOID	1.6/2.2
	2 SOLENOIDS	2.2/2.8
VALVE BODY (MATERIAL)		CASTING PHOSPHATING SURFACE

CHARACTERISTIC CURVES

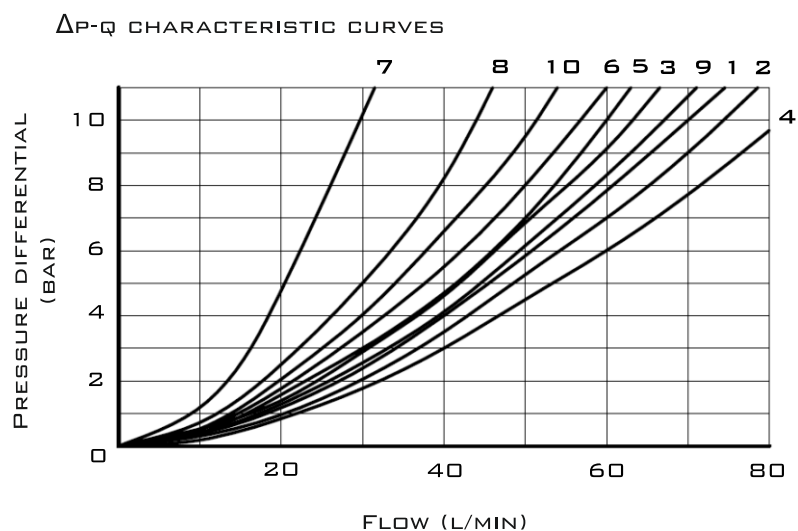


7 CURVE - SPOOL SYMBOL "R" IN SHIFTED POSITION B → A;
8 CURVE - SPOOL SYMBOL "G" AND "T" IN CENTRAL POSITION;
9 CURVE - SPOOL SYMBOL "H" AND "T" IN CENTRAL POSITION
P → T.

SPOOL SYMBOL	FLOW DIRECTION			
	P - A	P - B	A - T	B - T
A, B	3	3	-	-
C	1	1	3	1
D, Y	5	5	3	3
E	3	3	1	1
F	1	3	1	1
G	6	6	9	9
H	2	4	2	2
J, Q	1	1	2	1
L	3	3	4	9
M	2	4	3	3
P	3	1	1	1
R	5	5	4	-
T	10	10	9	9
U	3	3	9	4
V	1	2	1	1
W	1	1	2	2


SCHEMES

SCHEMES OF 2-POSITION DIRECTIONAL SPOOL VALVES VERSIONS WITH POSITIONS A, B

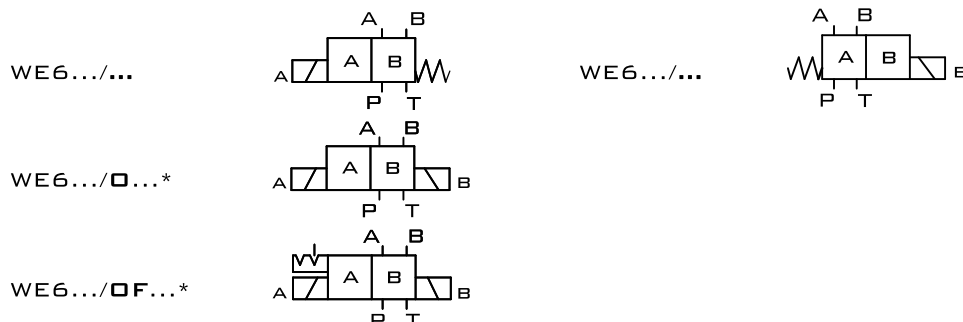


* – VERSIONS AVAILABLE ONLY FOR SPOOL SCHEMES: A, C, D


WORKING AND INDIRECT POSITIONS

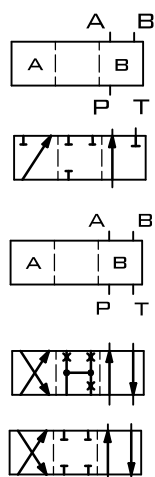


WORKING POSITIONS

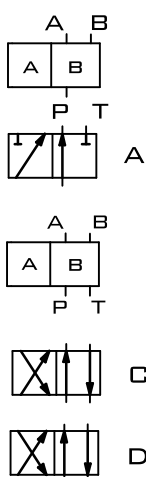


WORKING AND INDIRECT POSITIONS

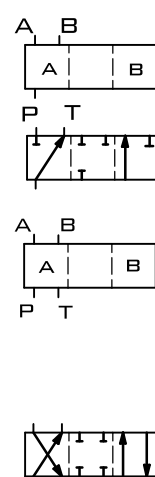

WORKING POSITIONS

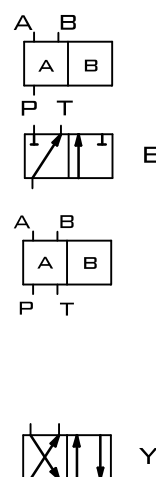

SCHEMES OF 3-POSITION DIRECTIONAL SPOOL VALVES




WE6...A/...

WE6...A/O...*

WE6...A/OF...*

SCHEMES OF 2-POSITION DIRECTIONAL SPOOL VALVES


VERSIONS WITH POSITIONS A, O VERSIONS WITH POSITIONS O, B

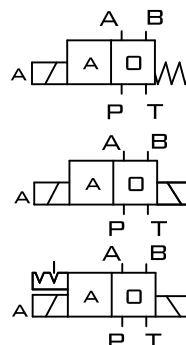

WE6...B/...

WE6...B/O...*

WE6...B/OF...*

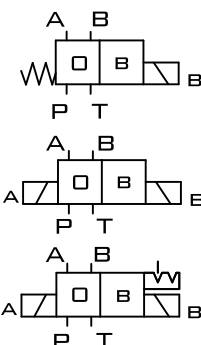

* – VERSIONS AVAILABLE ONLY FOR SPOOL SCHEMES: EA, GA, HA, JA, MA, EB, GB, HB, JB, MB

SEE ALSO:
WE10, WEH

SCHEMES

HYDRAULIC SCHEMES OF SPOOLS

WORKING AND
INDIRECT POSITIONS









WORKING
POSITIONS

WORKING AND
INDIRECT POSITIONS



WORKING
POSITIONS

WORKING AND
INDIRECT POSITIONS



WORKING
POSITIONS





E





EA




EB





F





FA





FB





G




GA





GB



H




HA





HB





J




JA





JB




L



LA





LB





M





MA





MB



P




PA





PB





Q*





QA*





QB*





R





RA





RB





T





TA





TB



U




UA





UB



V*



VA*





VB*



W*




WA*



WB*

* - FLOW SECTION FOR SPOOL W IN CENTRAL POSITION: 3 % NOMINAL FLOW

SUBPLATE INSTALLATION DIMENSIONS

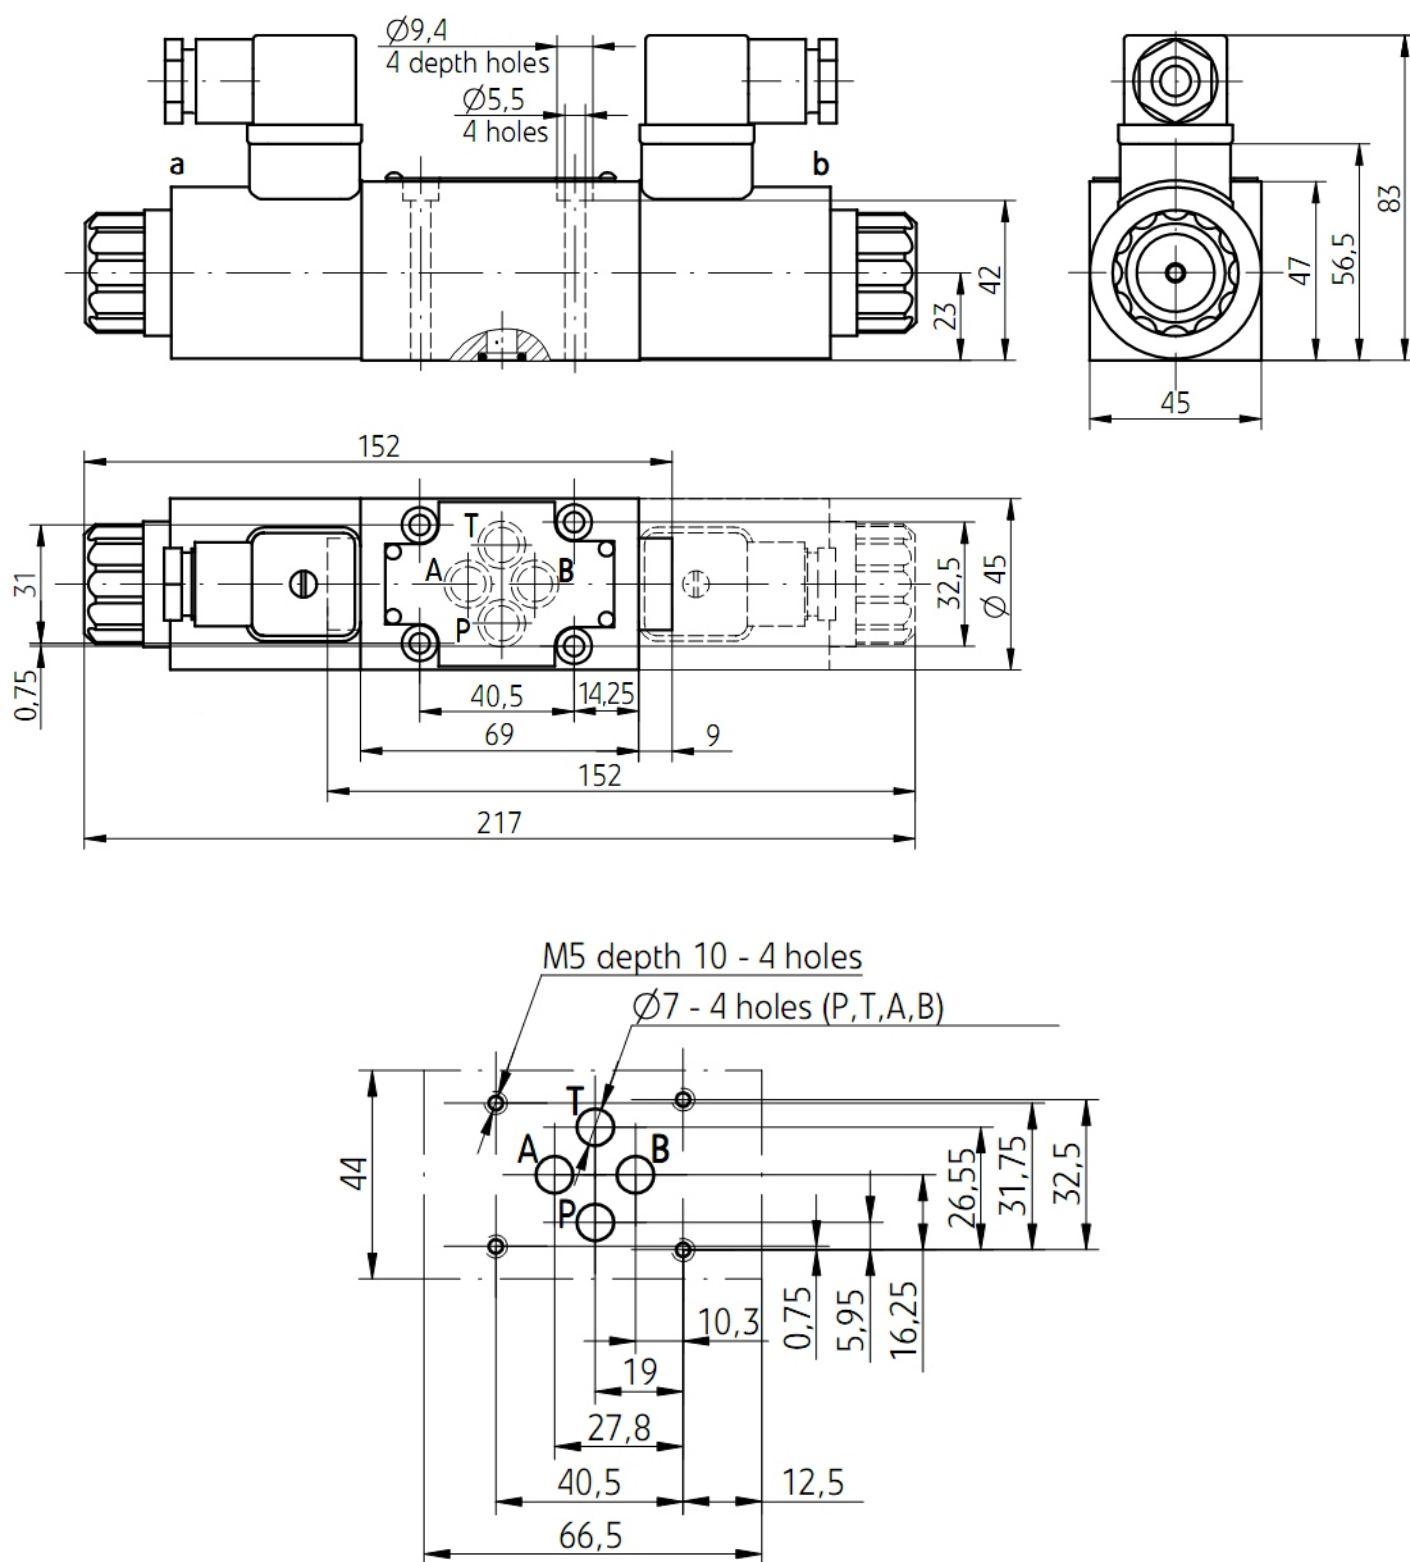



DISTRIBUTORI
OLEODINAMICI

WE6

SOLENOID OPERATED
DIRECTIONAL CONTROL VALVES

ORDER CODE

	WE	6				E						
--	----	---	--	--	--	---	--	--	--	--	--	--

3=3-WAY
4=4-WAY

6=6 SIZE

SPOOL TYPE

6X=60-69 SERIES

NO CODE=WITH SPRING RETURN
□=WITHOUT SPRING RETURN
□F=WITHOUT SPRING RETURN
WITH DETENT

E=STANDARD SOLENOID

NO CODE=NBR SEALS
V=FKM SEALS

Z5L=SQUIRE PLUGS WITH LAMP

NO CODE=WITHOUT THROTTLE INSERT
B0.8=THROTTLE 0.8 MM
B1.0=THROTTLE 1.0 MM
B1.2=THROTTLE 1.2 MM

N9=WITH CONCEALED HAND EMERGENCY

G12=DC12V
G24=DC24V
W110R=AC110V
W220R=AC220V