



**DISTRIBUTORI
OLEODINAMICI**

WMM10

**MANUALLY OPERATED
DIRECTIONAL CONTROL VALVES**


WMM10 SERIES MANUALLY OPERATED DIRECTIONAL CONTROL VALVES ARE DIRECT TYPE DIRECTIONAL SPOOL VALVES. THESE VALVES ARE USED TO THE START, STOP AND DIRECTION OF FLOW. THIS SERIES WITH DETENT OR RETURN SPRING ARE AVAILABLE.



TECHNICAL DATA

SIZE		10
MAX. FLOW RATE (L/MIN)		100
OPERATING PRESSURE (MPA)	A, B, P PORTS	31.5
	T PORT	16
WEIGHT (KG)		4.4
VALVE BODY (MATERIAL)		CASTING PHOSPHATING SURFACE

CHARACTERISTIC CURVES

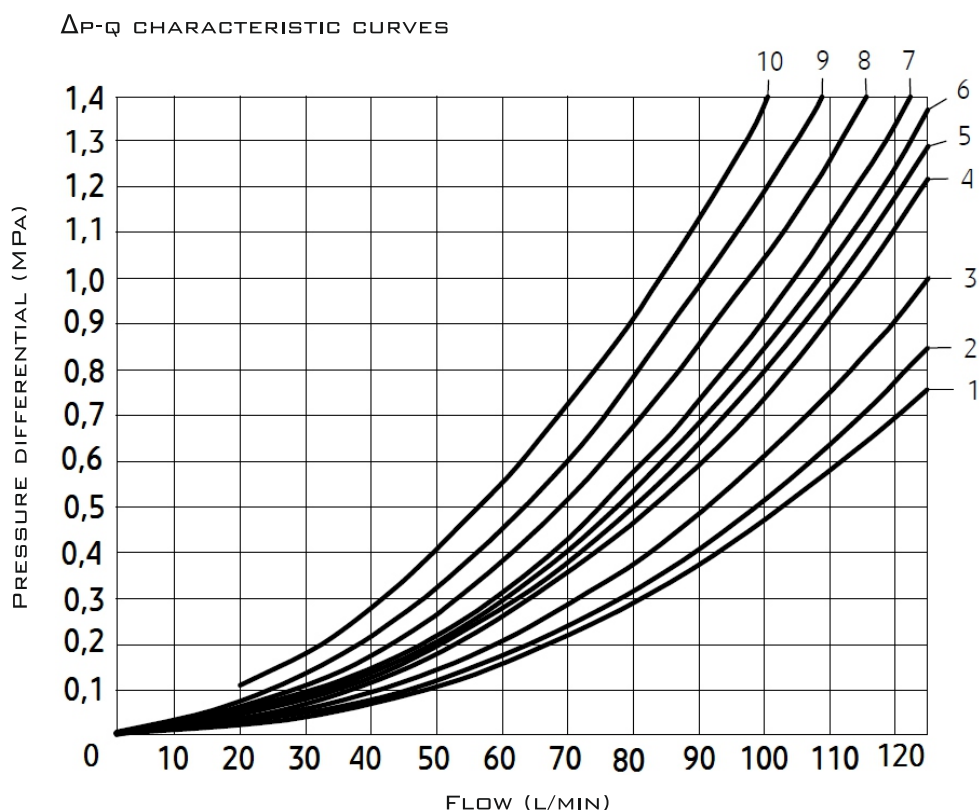

SPOOL SYMBOL	FLOW DIRECTION			
	P - A	P - B	A - T	B - T
A; B	3	3	—	—
C	3	3	4	5
D; Y	5	5	6	6
E	1	1	4	4
F	2	3	7	4
G	3	3	6	7
H	1	1	6	7
J	1	1	3	3
L	2	2	3	5
M	1	1	4	5
P	4	2	5	7
Q	1	2	1	3
R	3	6	4	—
T	3	3	6	7
U, V	2	2	3	3
W	2	2	4	5

9 CURVE - SPOOL SYMBOL "R" IN SHIFTED POSITION B → A;
 3 CURVE - SPOOL SYMBOL "H" IN CENTRAL POSITION P → T;
 4 CURVE - SPOOL SYMBOL "F" IN CENTRAL POSITION P → A;
 9 CURVE - SPOOL SYMBOL "F" IN CENTRAL POSITION A → T,
 SPOOL SYMBOL "F", "G" AND "T" IN CENTRAL POSITION
 P → T;
 5, 8, 10 CURVES - SPOOL SYMBOL "P" IN CENTRAL
 POSITION P → B, B → T AND P → T.




DISTRIBUTORI
OLEODINAMICI

WMM10


MANUALLY OPERATED
DIRECTIONAL CONTROL VALVES

SPOOL SYMBOLS

2-POSITION VALVES

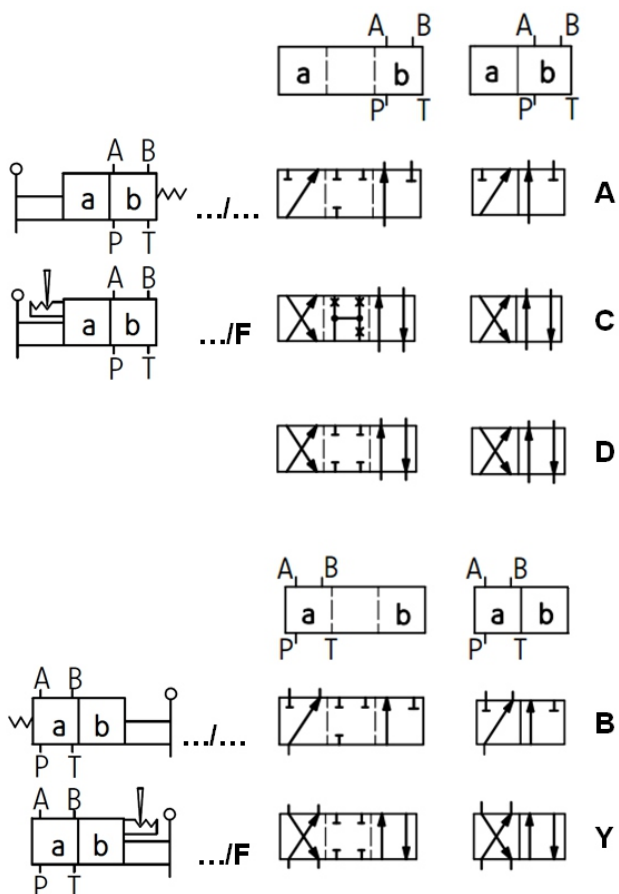


3-POSITION VALVES

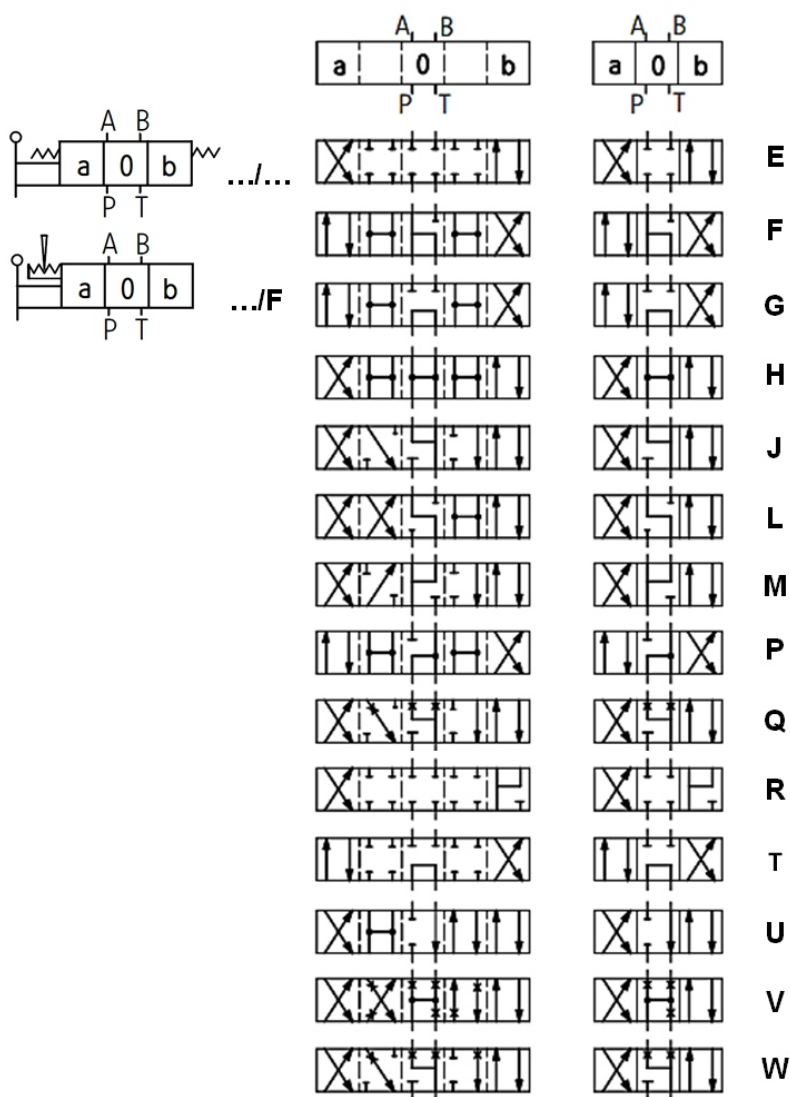

SEE ALSO:
WMM6, WMM16,
WMM25

SUBPLATE INSTALLATION DIMENSIONS

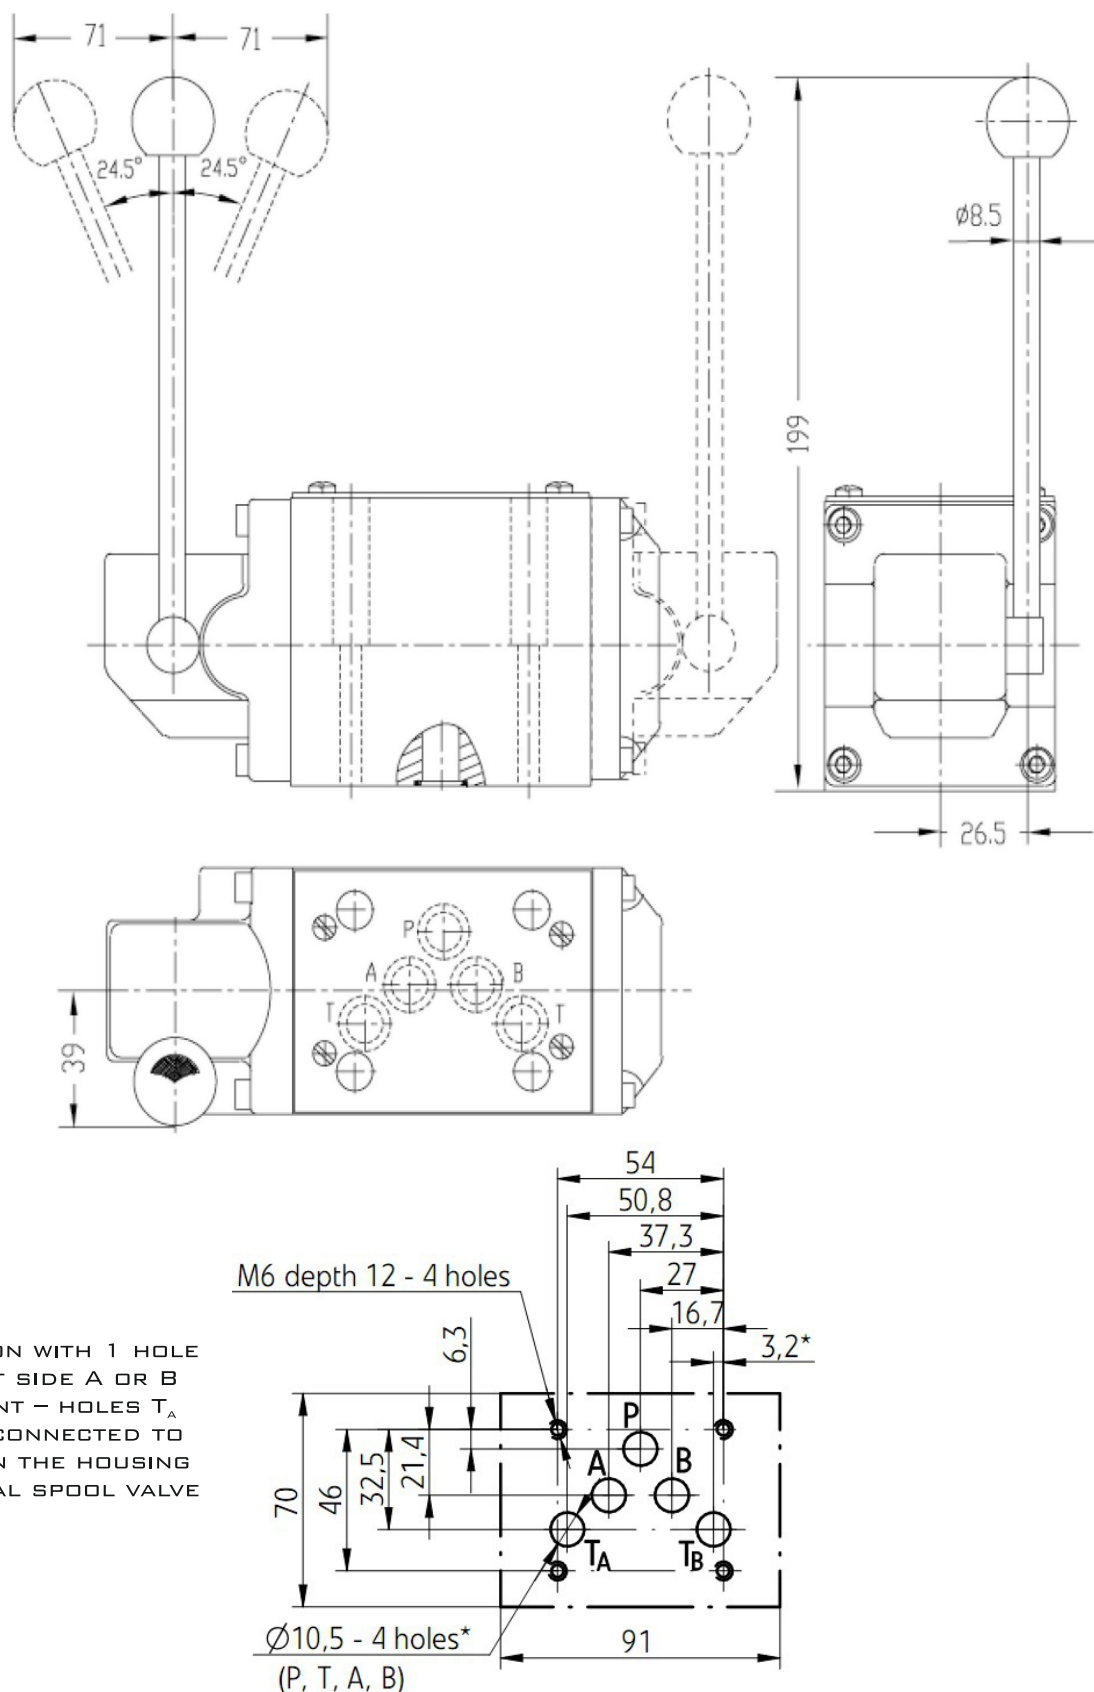



DISTRIBUTORI
OLEODINAMICI

WMM10

MANUALLY OPERATED
DIRECTIONAL CONTROL VALVES

ORDER CODE

	WMM	10						
--	-----	----	--	--	--	--	--	--

3=3-WAY
4=4-WAY

10=10 SIZE

SPOOL TYPE

10=10 SERIES
50=50 SERIES

NO CODE=SPRING RETURN WITHOUT DETENT
F=DETENT WITHOUT SPRING RETURN

NO CODE=HANDLE ON SIDE OF
PORT A
L=HANDLE ON SIDE OF PORT B

NO CODE=MINERAL SUBSTANCE
HYDRAULIC OIL
V=PHOSPHATE EATER
HYDRAULIC OIL

NO CODE=WITHOUT THROTTLE INSERT
B0.8=THROTTLE 0.8 MM
B1.0=THROTTLE 1.0 MM
B1.2=THROTTLE 1.2 MM